

EZ CARE IP HEALTHCARE AND COMMUNICATION PLATFORM

ez-care.com

EZ CARE Safe. Future-Proof. Efficient.


MODULES

With multiple integration options, EZ CARE offers customer-specific solutions to increase the efficiency and safety of your premises.

EZ CARE is integrated into the security and information network via ultra-safe and certified interfaces. This ensures the functionality of the nurse call system and compliance with rigorous patient safety standards.


SECURE SEPARATION, 2 x MOPP

KEY COMPONENTS

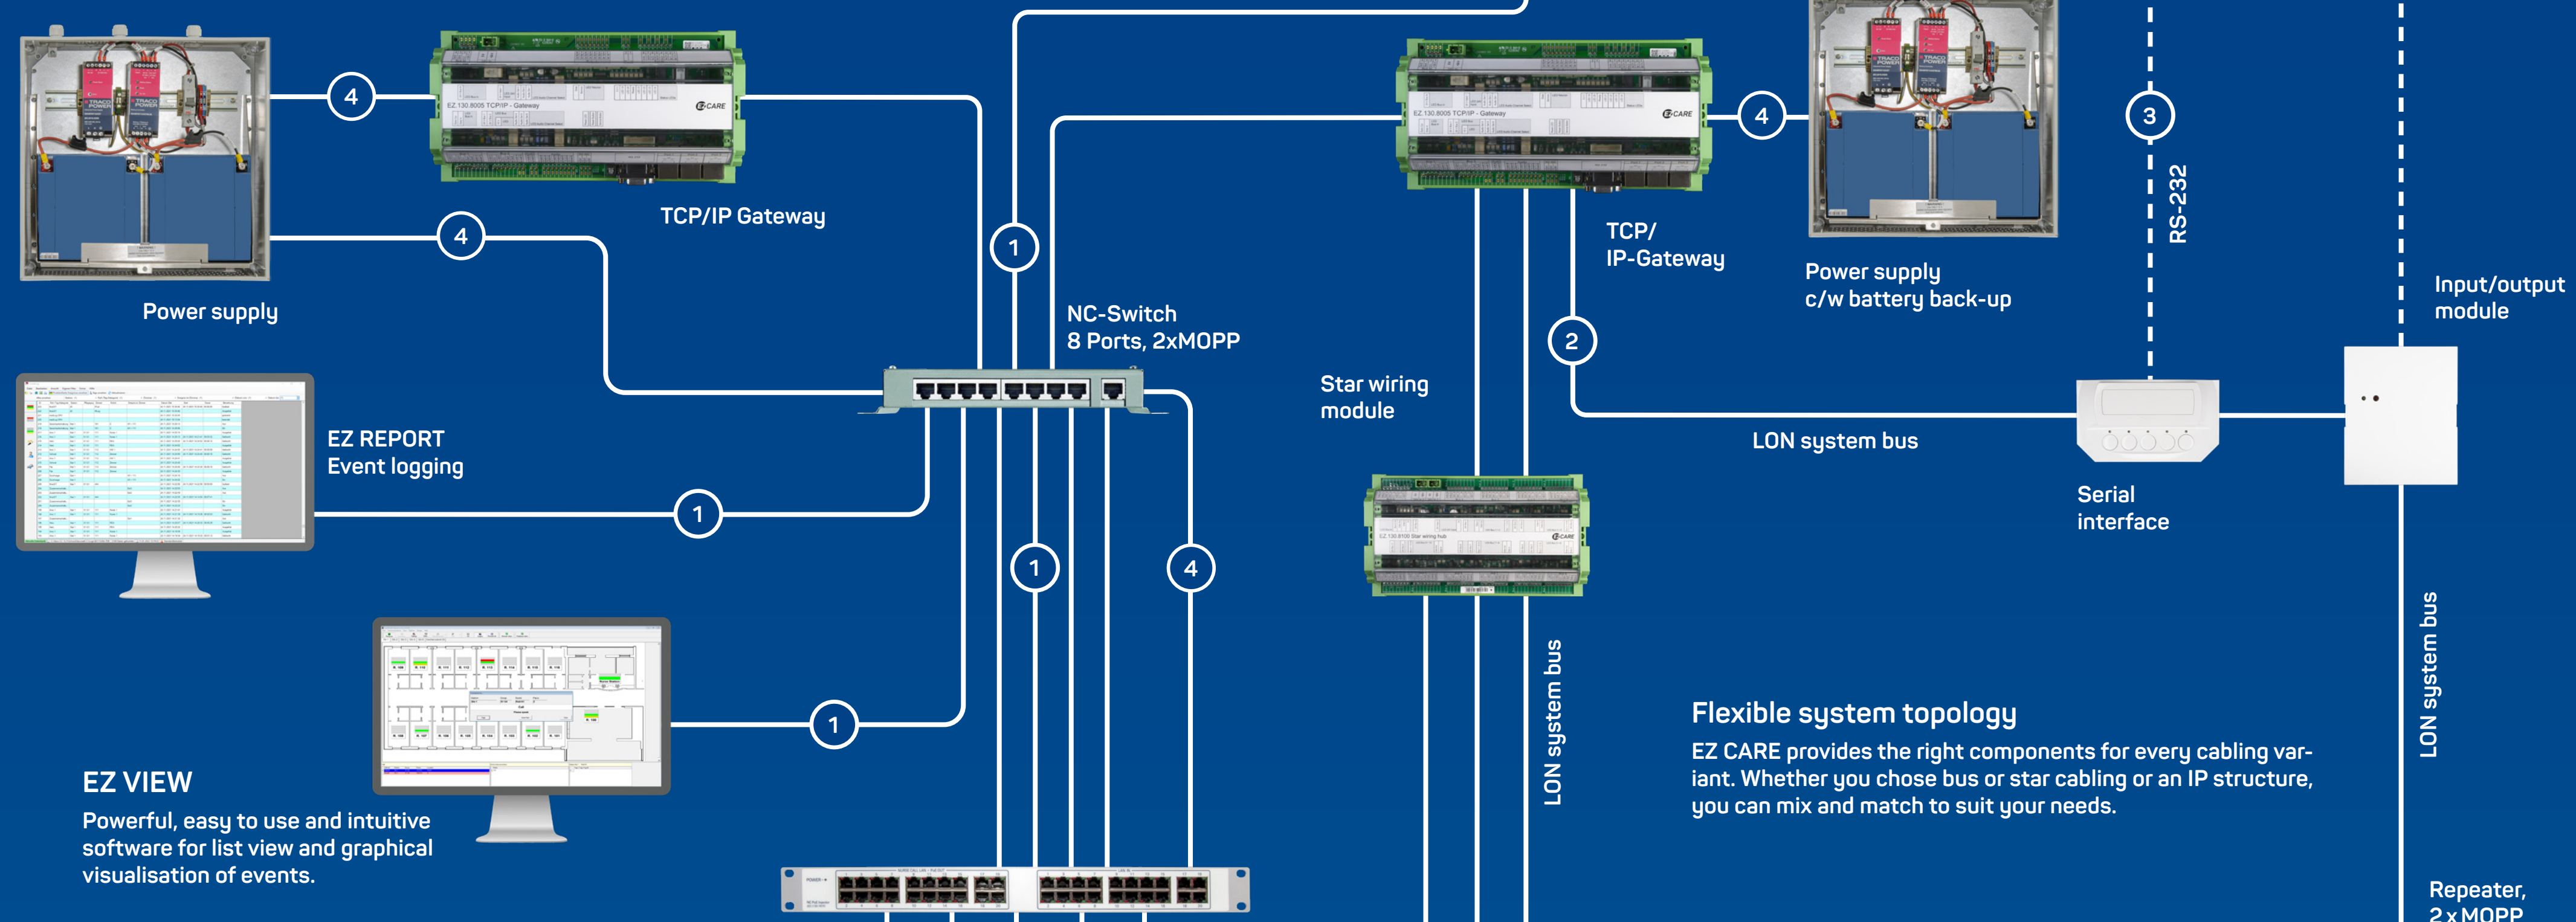


Flexible system topology

EZ CARE provides the right components for every cabling variant. Whether you chose bus or star cabling or an IP structure, you can mix and match to suit your needs.

STATION COMPONENTS



ROOM EQUIPMENT

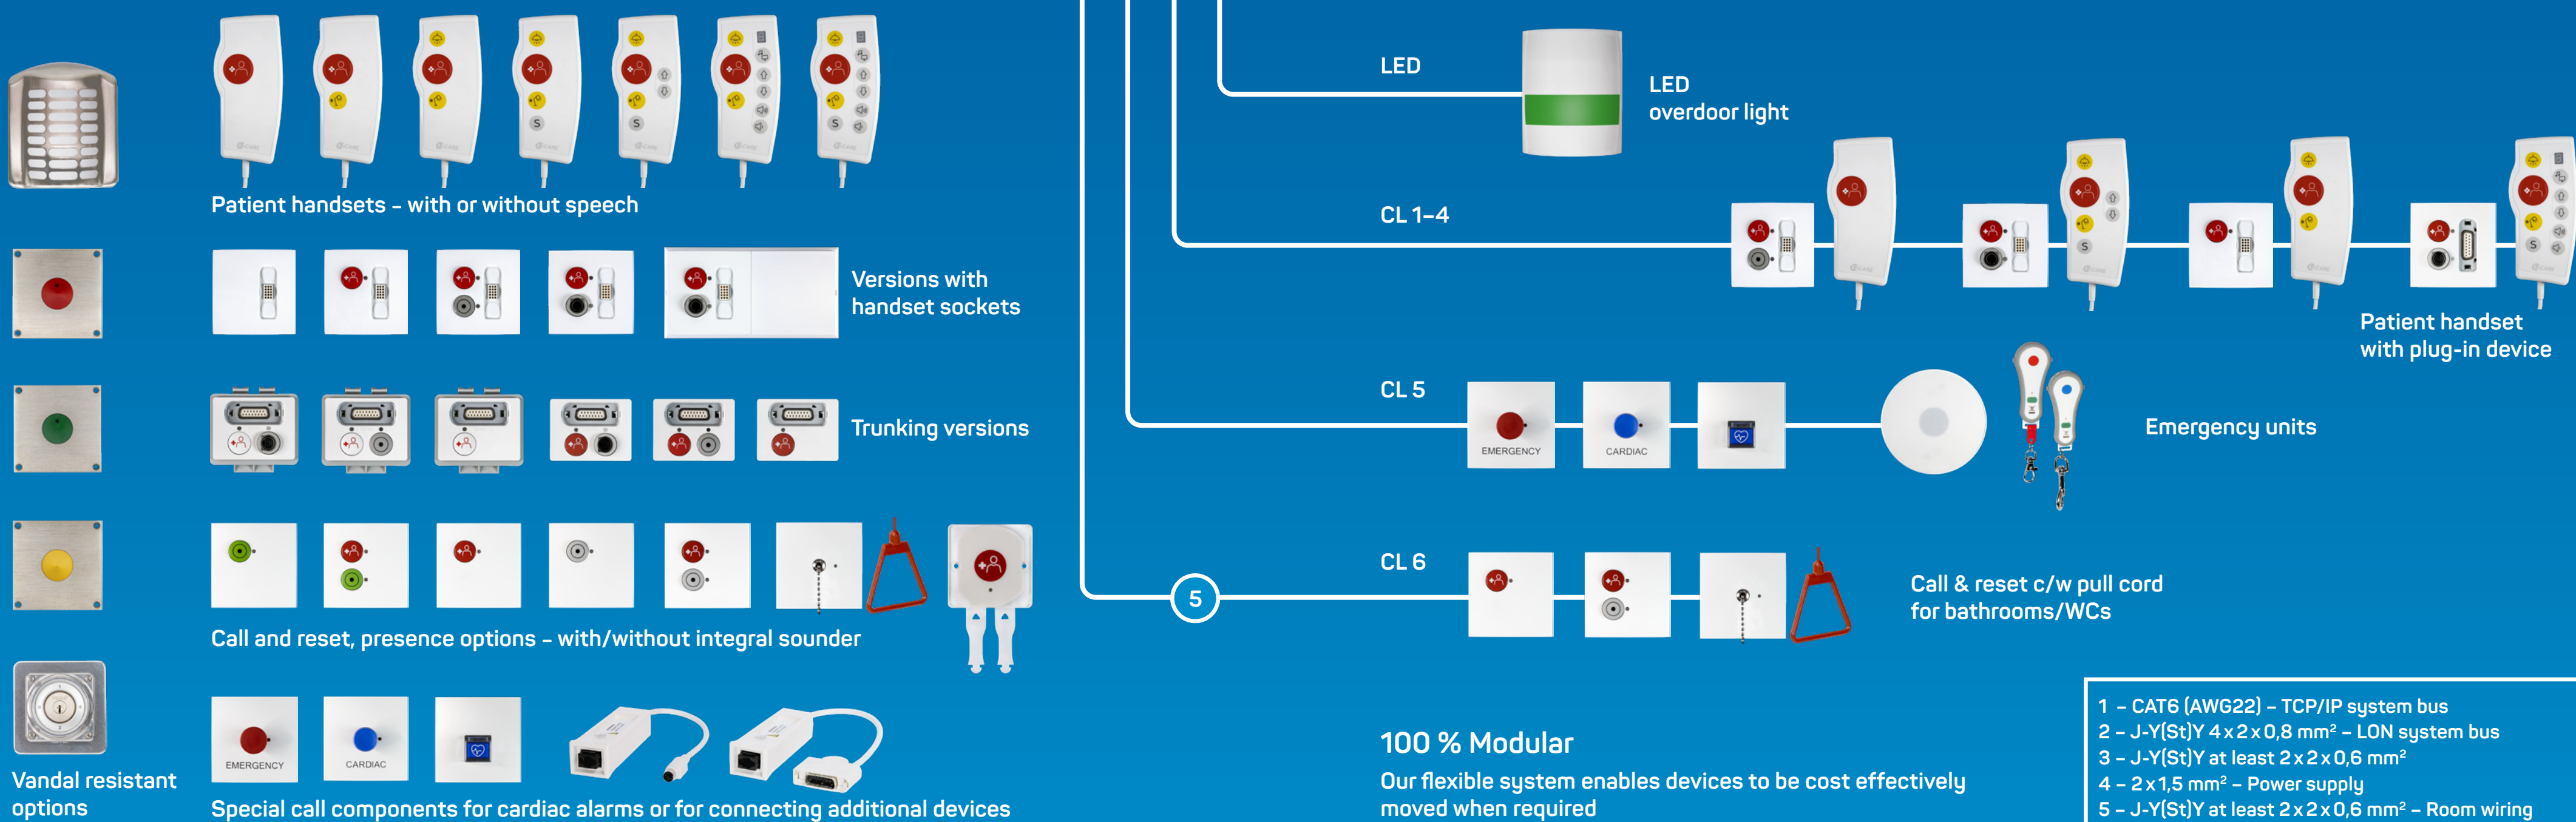


100 % Modular

Our flexible system enables devices to be cost effectively moved when required

- 1 - CAT6 (AWG22) - TCP/IP system bus
- 2 - J-Y(St)Y 4 x 2 x 0.8 mm² - LON system bus
- 3 - J-Y(St)Y at least 2 x 2 x 0.6 mm²
- 4 - 2 x 1.5 mm² - Power supply
- 5 - J-Y(St)Y at least 2 x 2 x 0.6 mm² - Room wiring


TYPICAL HOSPITAL & CLINIC APPLICATIONS

MENTAL HEALTH APPLICATIONS PREMISES

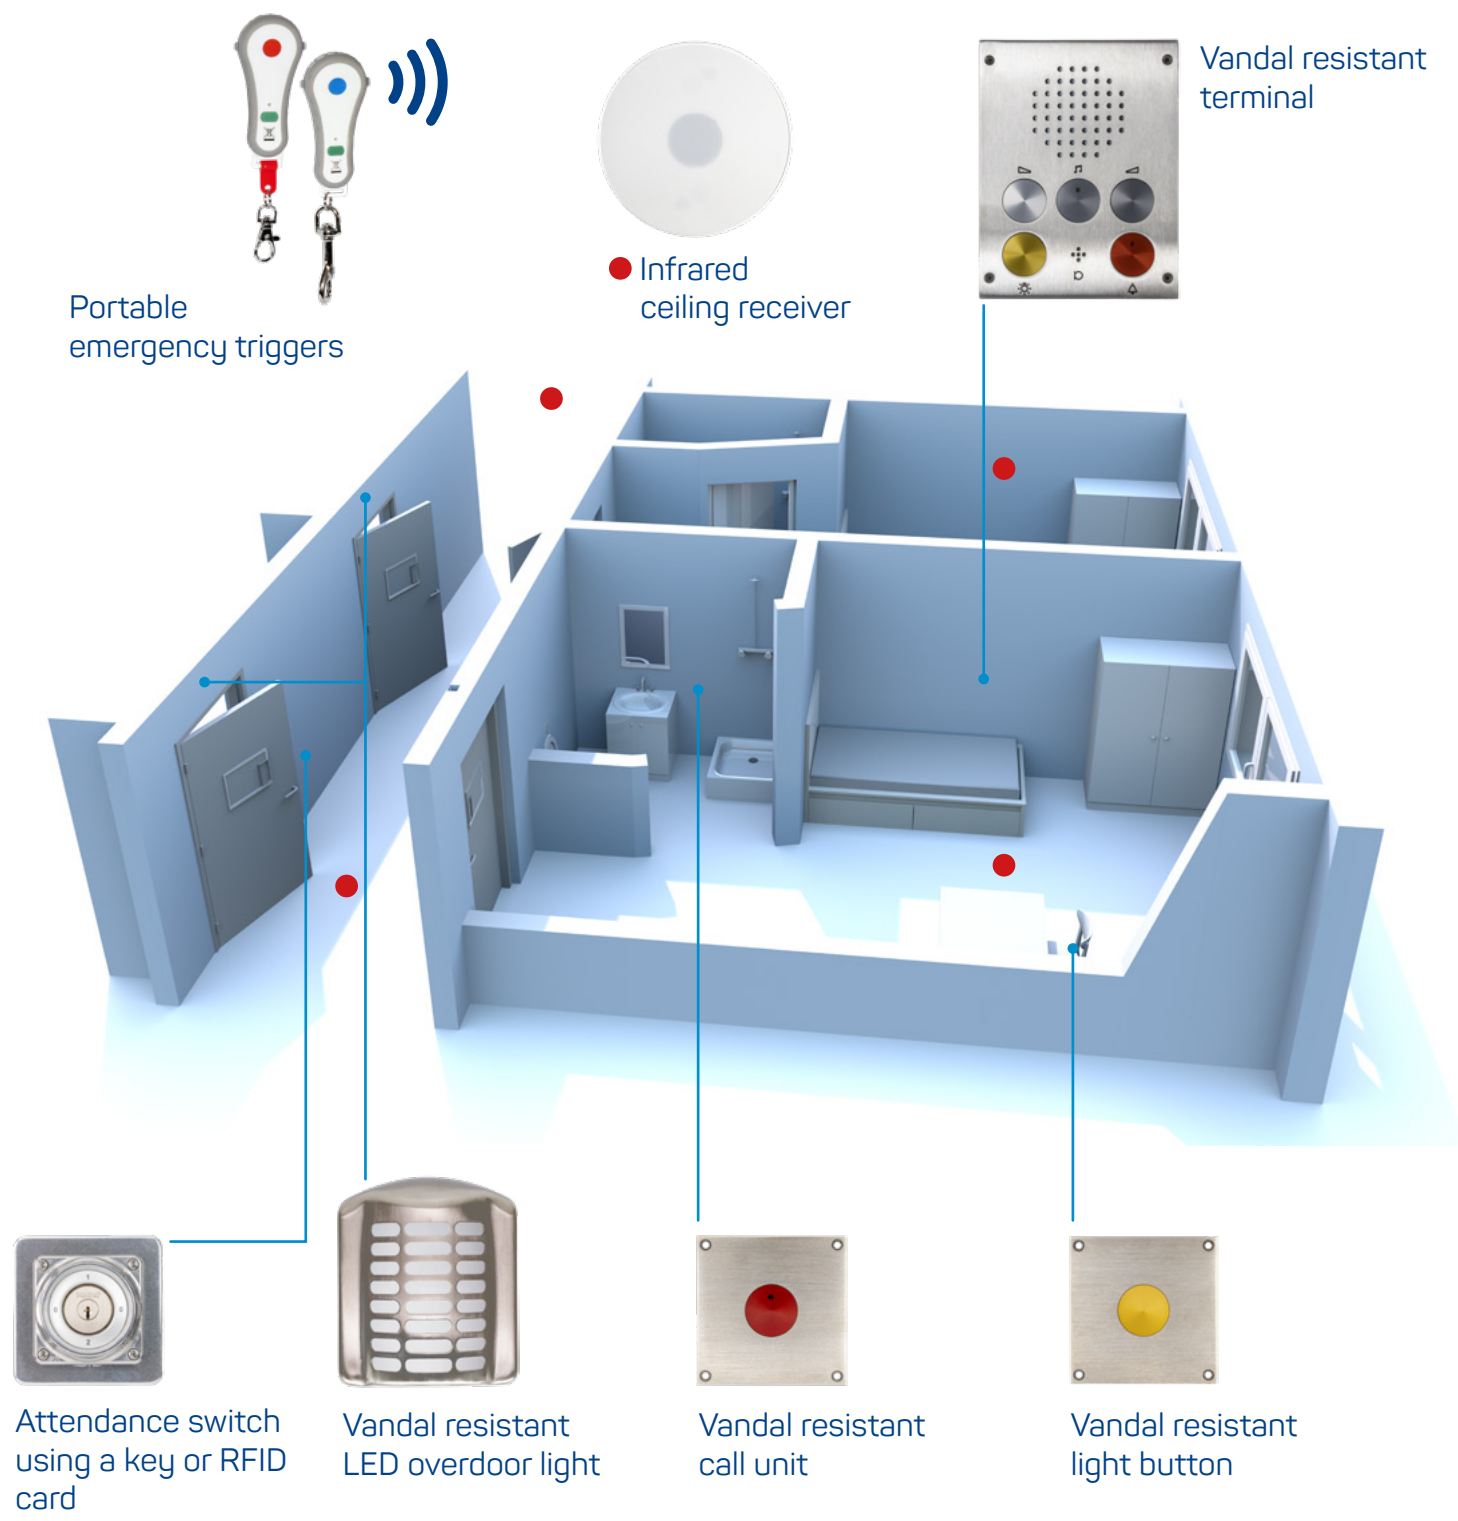


EZ CARE is often employed in mental health clinics, psychiatric, forensic and prison facilities too. Our robust and super reliable components have been especially developed for this sector.

NURSE BASE & CONSULTANT ROOMS

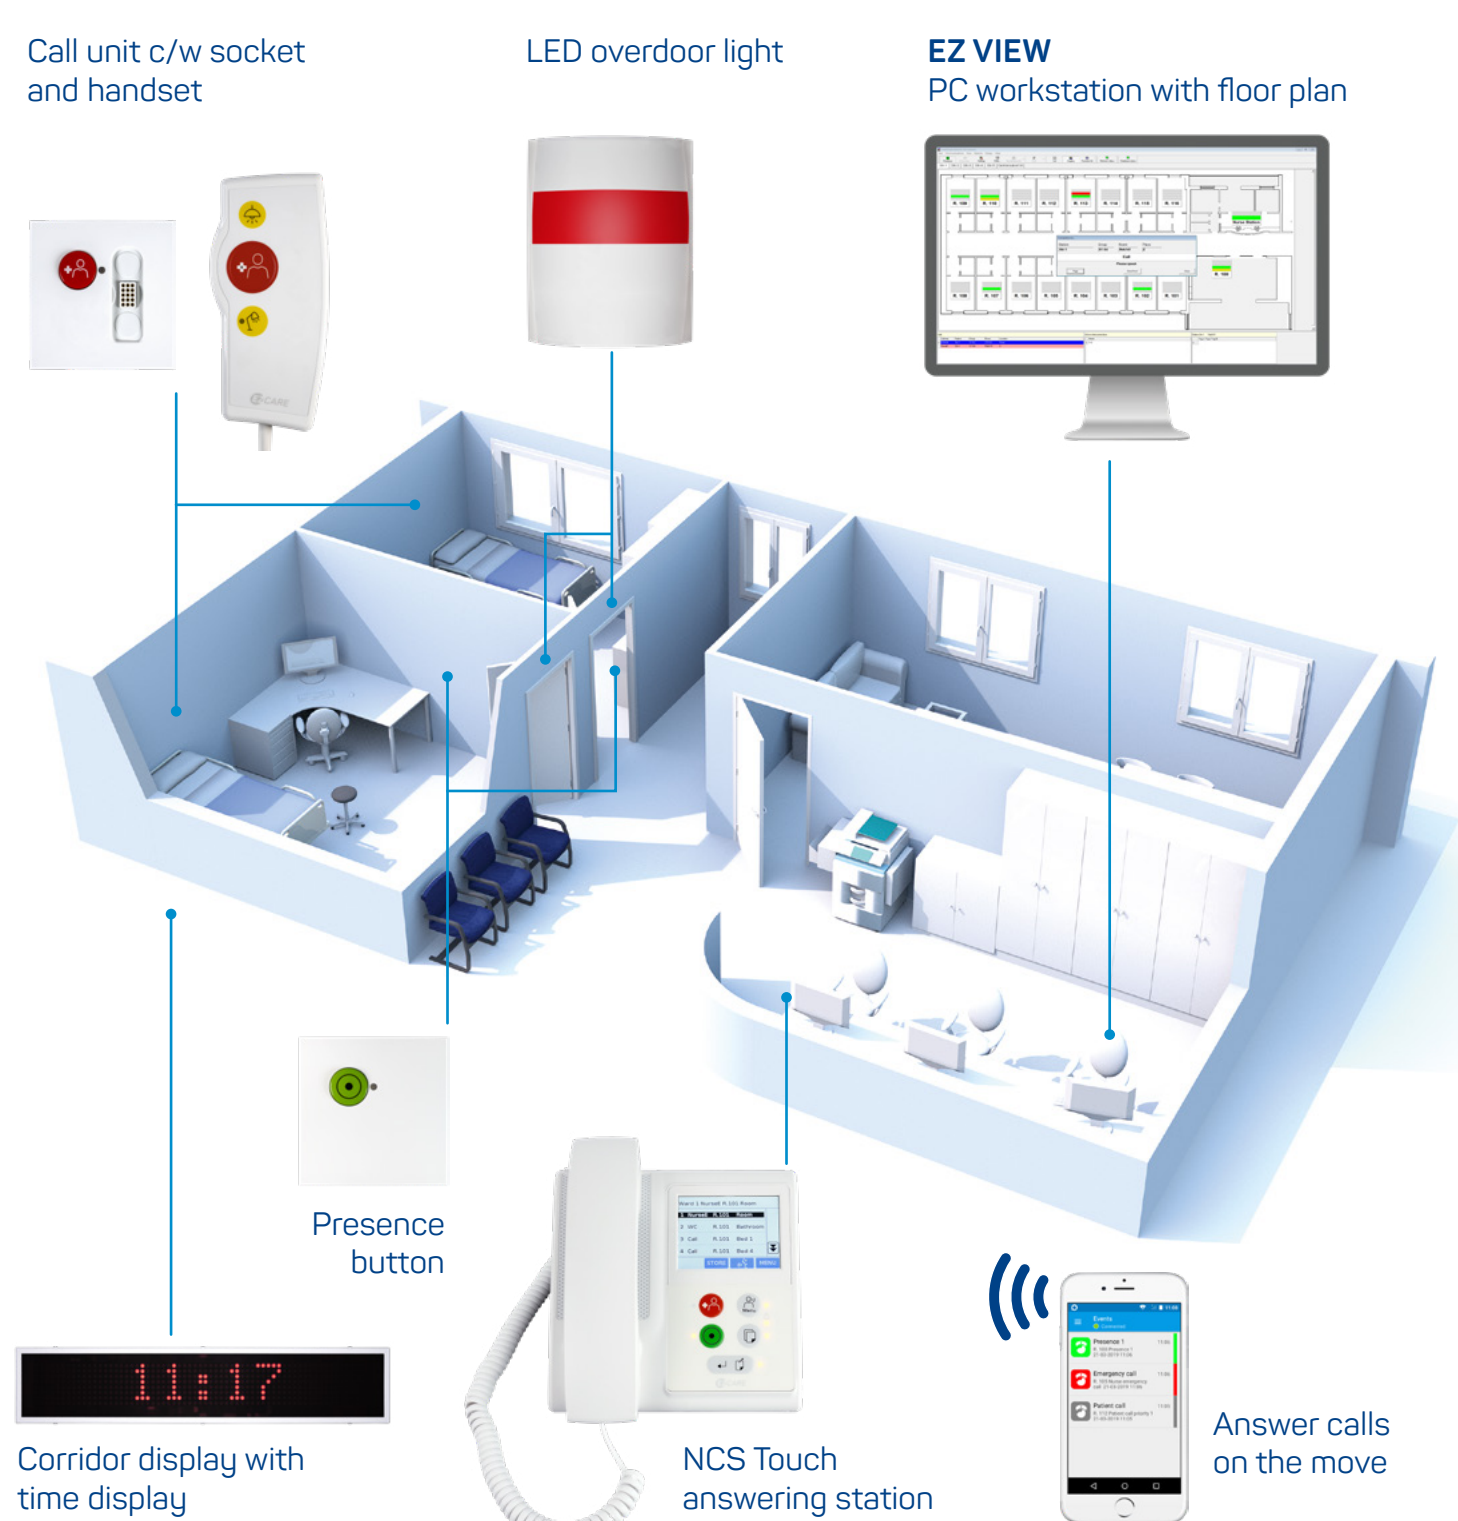


A variety of different displays are available for the nurse base. Receiving and managing calls is facilitated by **EZ CARE** displays. There are many ways to do so in easy, intuitive and time saving ways. The integrated speech supports the hospital staff in their daily work.

PATIENT ROOM WITH SPEECH – BEDHEAD TRUNKING FOR TWO BEDS

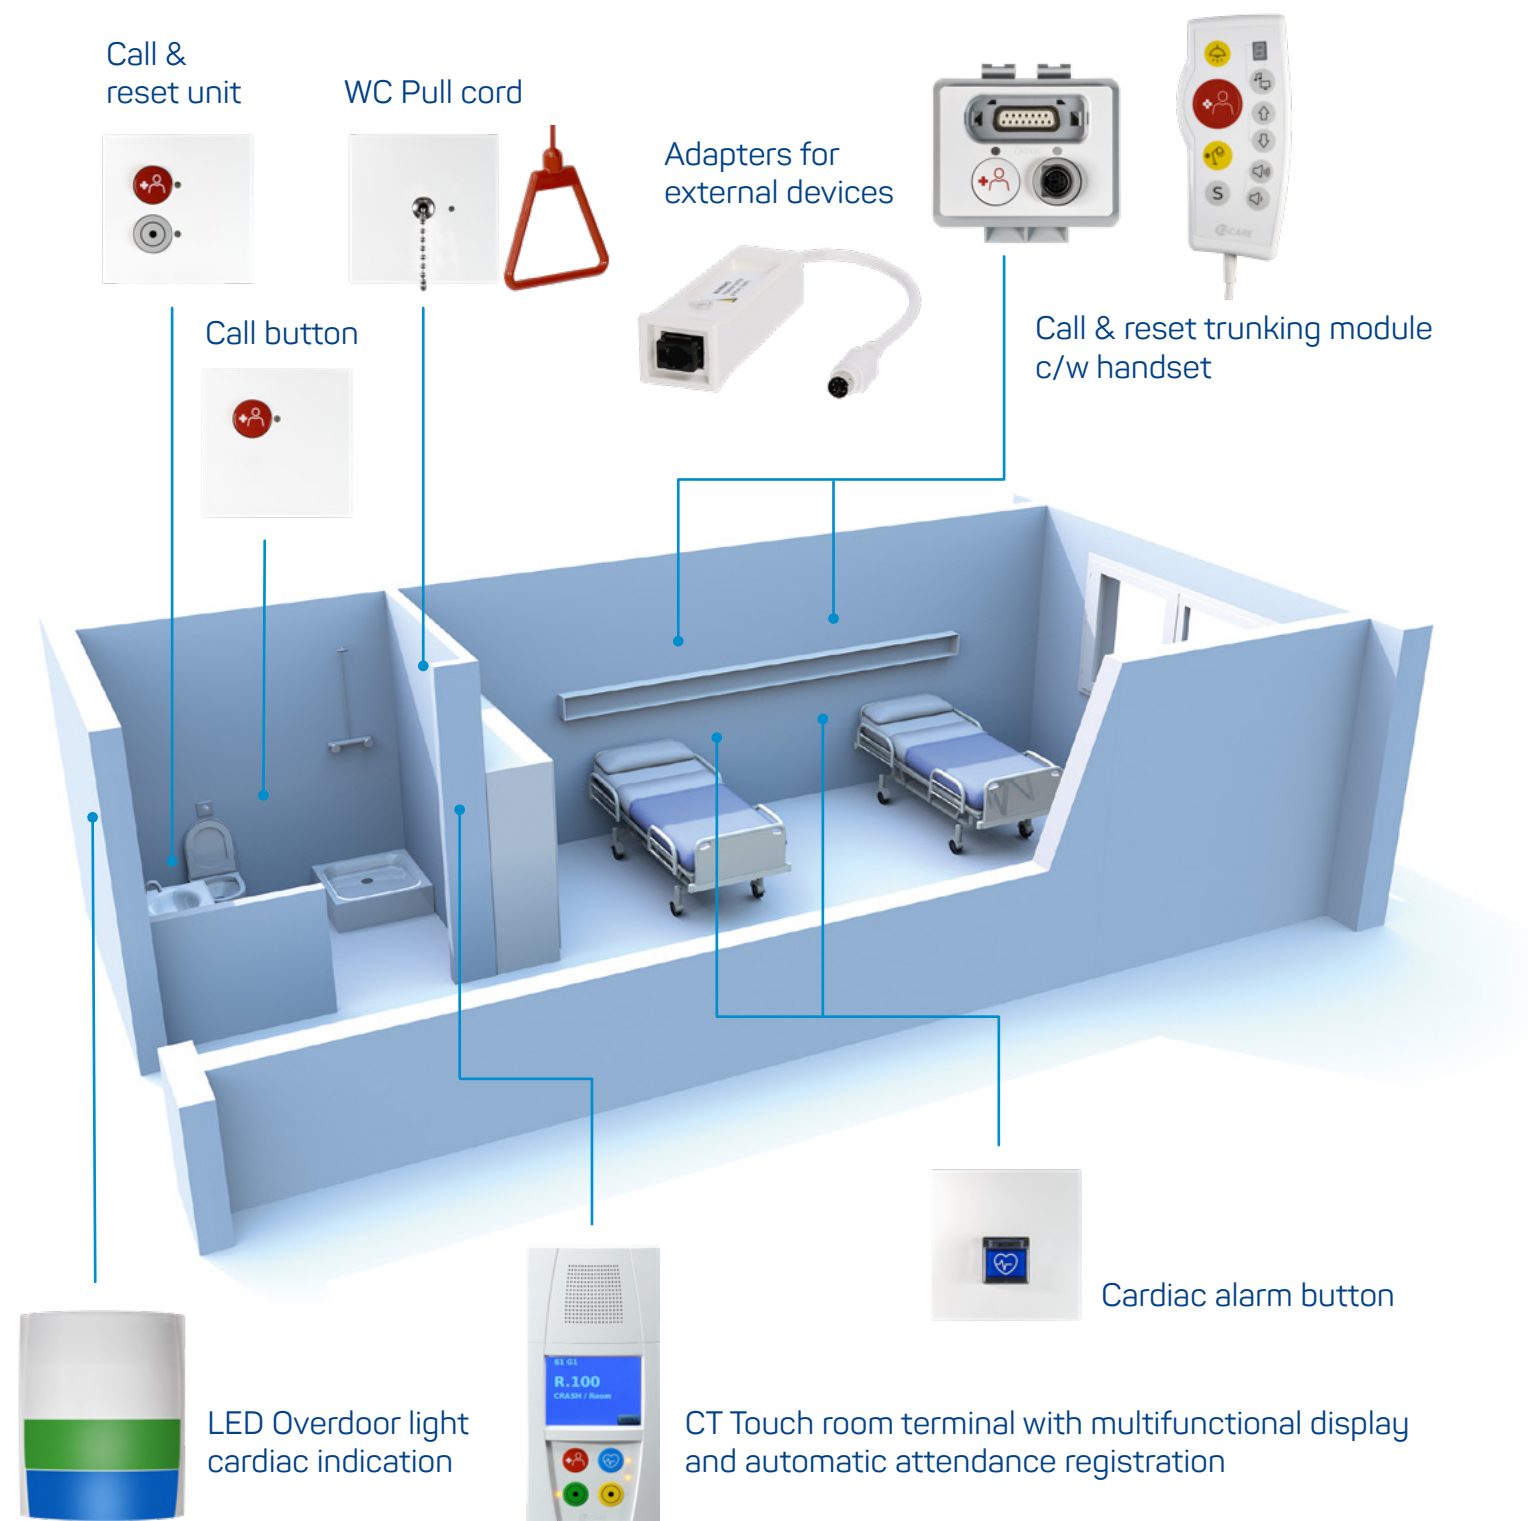

EZ CARE room components can be easily integrated into modern day care environments. The modular system offers the right solution for every requirement – for example, seamless integration into a bedhead trunking.

STATION WITH INTEGRATED SMART SENSORS

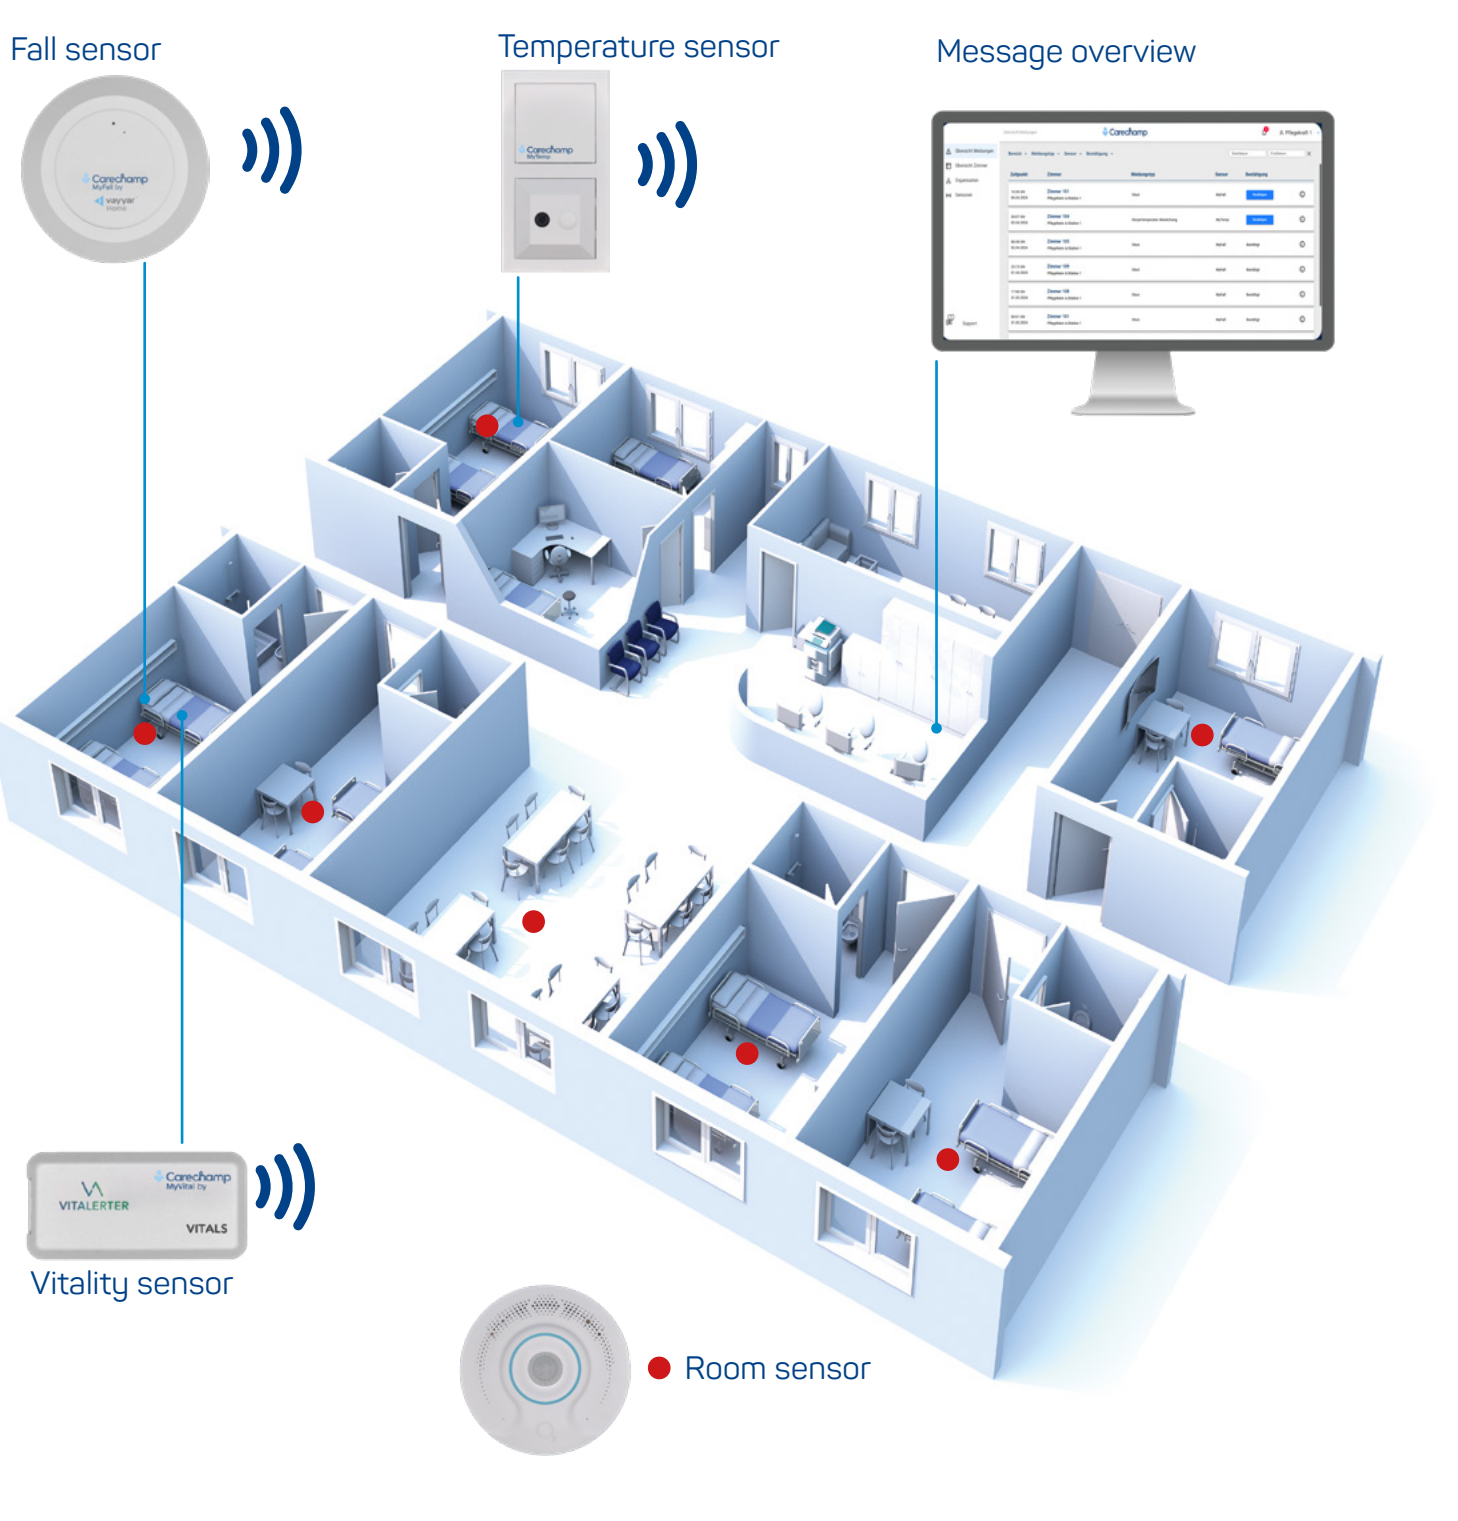

A variety of different sensors automatically collect care data and transfer it directly to the existing care software. In addition, automatically generated alarms are transmitted directly to the call system. This ensures that nursing staff are kept informed at all times. Work routines can be made more efficient and the quality of care is improved thanks to shorter response times.

NORMS, STANDARDS AND SERVICES

Norms, standards and services – we take them seriously, you relax

Conforms to the VDE standard

EZ CALL IP is a nurse call and communication system that complies with the DIN VDE 0834 standard (call systems in hospitals, nursing homes and similar facilities). The complete system is tested and certified by an independent accredited test centre according to DIN VDE 0834 Parts 1 and 2.

The components of the EZ CALL IP system also comply with the EMC regulations in their currently valid version and adhere to the limits prescribed in EN 61000-6-3 (emitted interference) and EN 61000-6-1 (interference immunity).

For safety reasons, anti-microbial materials are used and all devices for placing calls in the rooms are constantly monitored.

Conforms to standard ÖZS R1

By complying with the ÖZS guideline RAD1, we also meet the requirements of the Austrian market.

Compliant with the UK Bedside Services Directive: HTM 08-03

Our system fully complies with the UK HTM 08-03 (Health Technical Memorandum). So you can be sure that we always implement the highest standards.

Conforms to global standards

ÖZS **OVE**

Cooperation partner of the ÖVE

Quality management according to ISO 9001

CERTIFICATE

CERTIFICATE

DIN VDE 0834 Certificate

If assistance is needed, authorized and certified specialists are available on-site or remotely. This makes it quick and easy to determine what the problem is and take the appropriate action.

Company stamp


SCHRACK SECONET

Schrack Seconet Care Communication GmbH
Elbesbrunnengasse 18 | 1120 Vienna | Austria
EZ.950.2005E | Version 1.2 | 11. September 2025
© 2025 Schrack Seconet Care Communication GmbH
All rights reserved.

ez-care.com


CARE AND NURSING HOME SYSTEMS

BATHROOM & ADJACENT CARE BASE

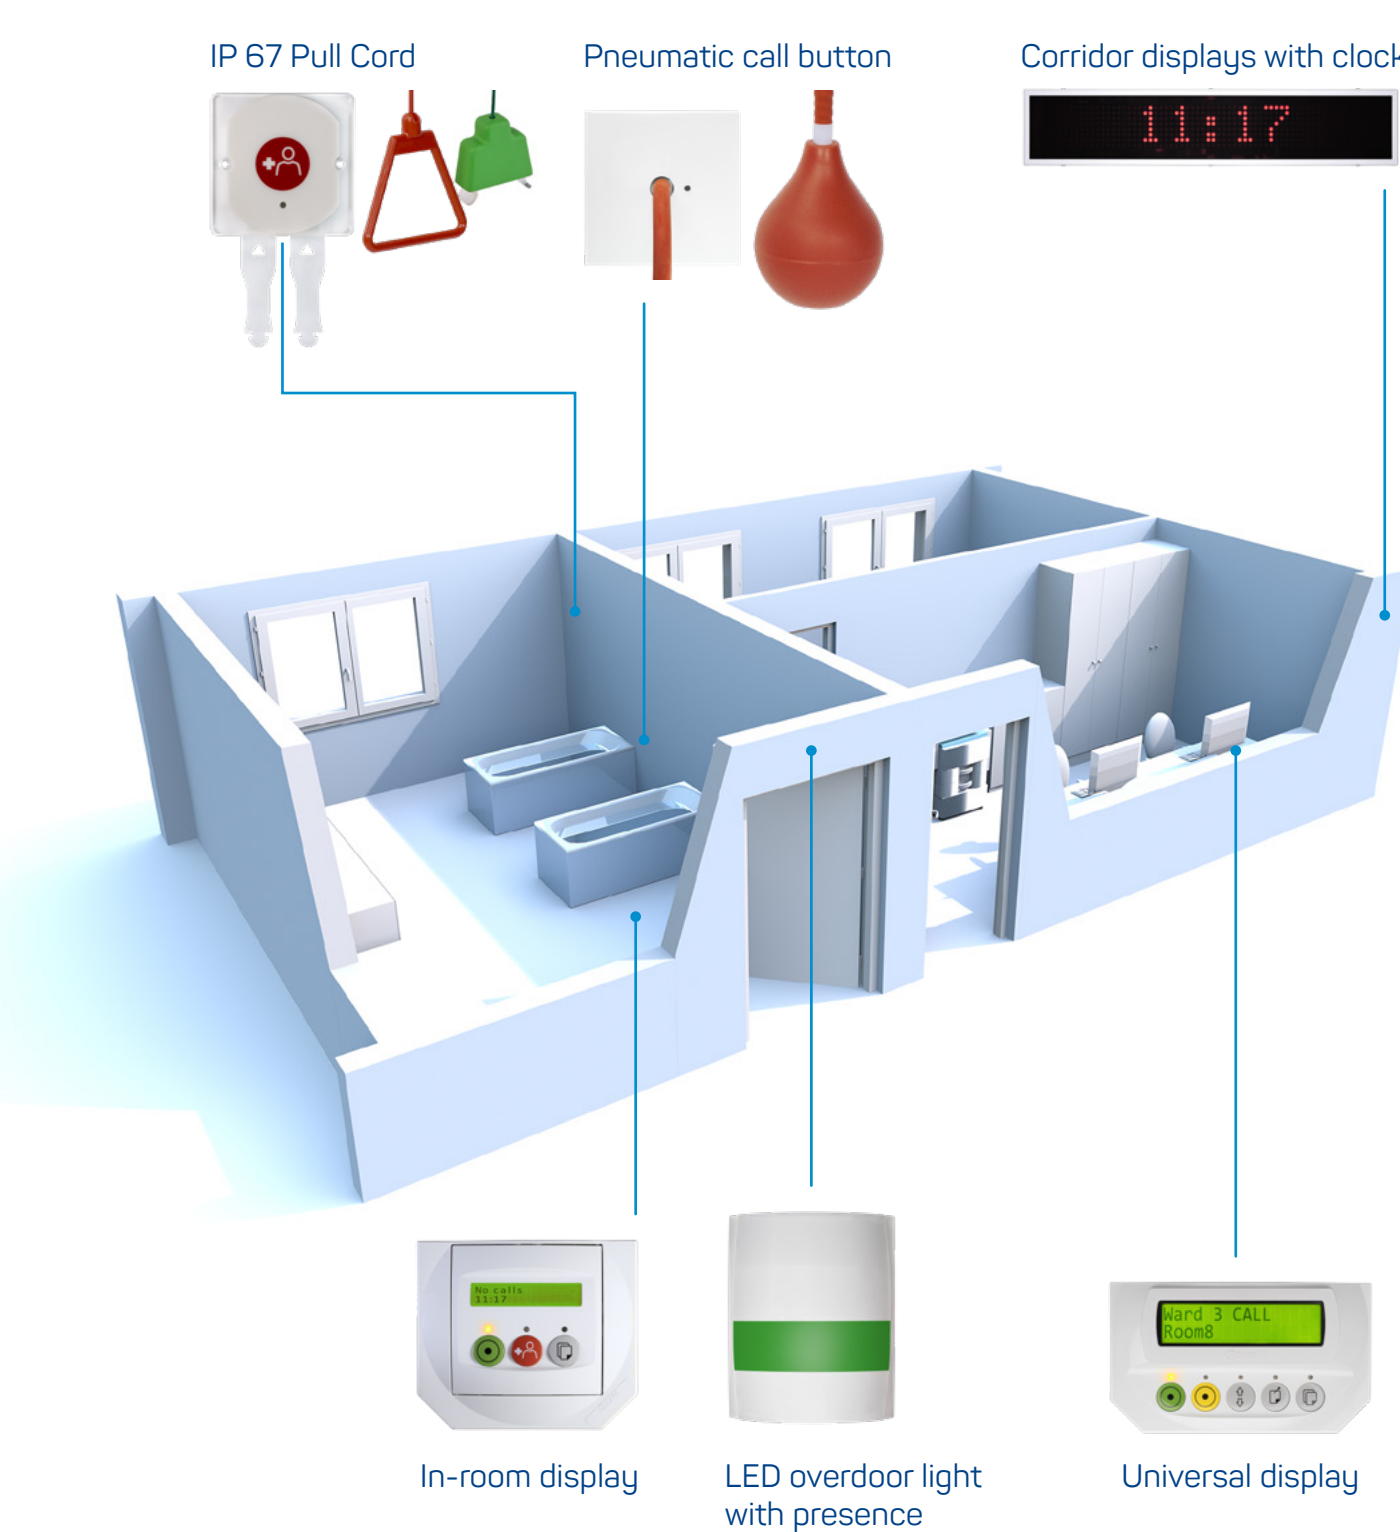

EZ CARE universal displays are used to display and manage calls where no speech is needed. In particularly demanding environments – for example the bathroom – special units such as pneumatic call button or waterproof pull cord are used.

BEDROOM

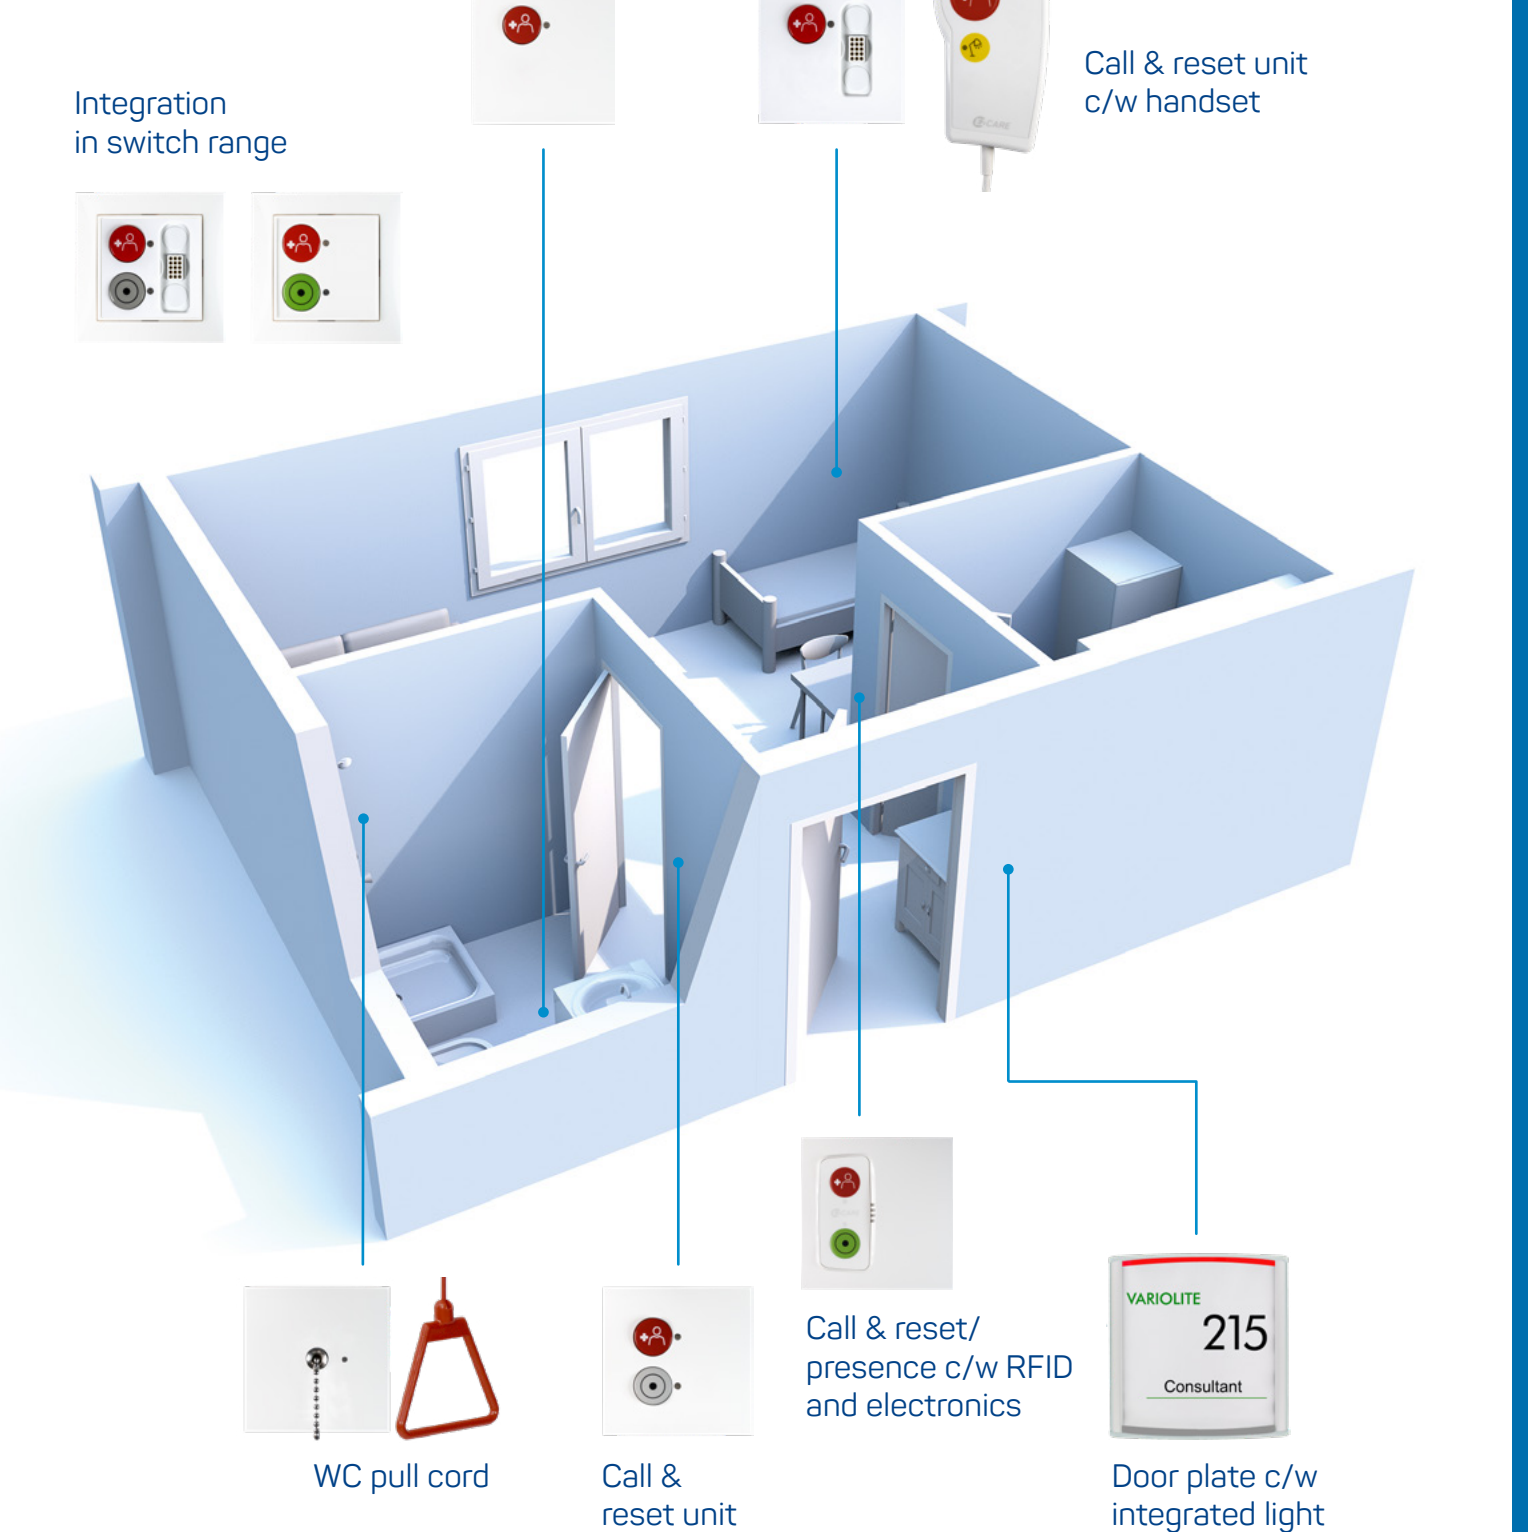

The visually appealing display elements in the corridor and the possibility of integrating the call units into switch ranges increase living comfort. At the same time, the high security standard of the call system is maintained at all times.



EZ CARE
IP HEALTHCARE AND
COMMUNICATION PLATFORM

ez-care.com

EZCARE Safe. Future-Proof. Efficient.